

Installation Instructions for the Ball & Ring Hitch Lock

Before installing the Ball & Ring Hitch Lock be sure the trailer is secured (tires chalked,brakes applied) and will not move.


1. Install the Ball & Ring Hitch Lock on a ball or ring trailer hitch by placing the locking plate beneath the hitch, then raise it into the ring hole or ball placement . (Figures 1 & 2)
2. Align the retaining plate with the lower locking plate and press it down into the ratcheting lock mechanism. (Figures 3 & 4).
3. Press both parts together firmly to secure the lock onto your hitch.

Secure the safety chains so the trailer cannot be pulled by them.

Do not wrap the chains through the lock! It alters the tight fit.

Removal of the Ball & Ring Hitch Lock

1. Insert key, turn clockwise and hold.
2. Lift the upper retaining plate off and out of the lower locking plate.
3. Lower locking plate from beneath hitch.
4. Re-assemble the Ball and Ring Hitch Lock and store in a secure location to allow for safe trailer and/or equipment operation.

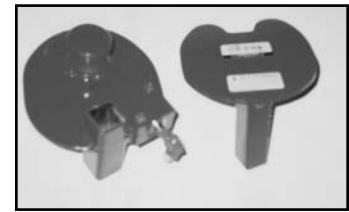

Locking Plate (left)
Retaining Plate (right)

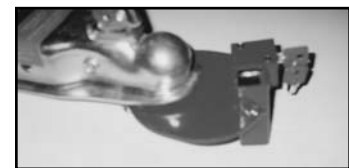


Figure 1

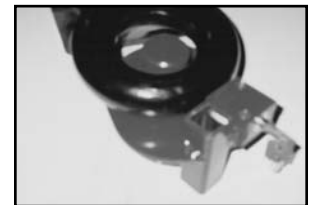


Figure 2



Figure 3



Figure 4

The Equipment Lock Company
Toll Free: 1.866.565.4887
www.equipmentlock.com
info@equipmentlock.com