

Installation Instructions for the Cushion Tire Lift Lock (keyed and combo)

Cushion Tire Lift Lock Installation

DO NOT INSTALL THE CUSHION TIRE LIFT LOCK WHILE THE EQUIPMENT IS ON OR RUNNING !!

Installation:

- 1) Prior to turning off the equipment, be sure to have the steering tires positioned in a manner similar to that shown:
Figure 1 is for scissor lifts and man lifts. Figure 2 is for forklifts.
- 2) Place the transmission in Park "P" or Stop (if available), set the emergency brake and turn off the equipment. **DO NOT INSTALL THE CUSHION TIRE LIFT LOCK WHILE THE EQUIPMENT IS ON OR RUNNING !!**

(ONLY for setting your combination) The lock is preset from the factory at 0000.

- A. Unlock the mechanism and insert the special key in the keyhole, pressing in firmly, and turn one quarter turn in either direction. (Key will click into place.)
 - B. Set your numerical combination. Turn key to original position, with key in line with locking device. **Remember the combination you have selected!**
 - C. To lock, depress mechanism and scramble the numbers.
- 3) Unlock the Cushion Tire Lift Lock and remove the keys.
 - 4) Install the Cushion Tire Lift Lock by first hooking the extending arm behind the steering tire as shown in Figure 3.
 - 5) While holding the extending arm in position on the steering tire, slide the main body with the locking half onto the extending arm (Figure 4).
 - 6) Continue to slide the two halves together until the steering tire is secured between the two halves and depress the locking button or change your code and depress by maintaining slight pressure and adjusting the two halves so the locking pin aligns with the appropriate hole as shown (Figure 5).
 - 7) Test to see that you have a snug fit. Adjust as needed.
 - 8) Install the red shower-cap type cover over the steering wheel or drive control box reminding the next operator the lock is installed (Figure 6).
 - 9) Secure keys in a safe place.

Removing The Cushion Tire Lift Lock

DO NOT ATTEMPT TO REMOVE THE CUSHION TIRE LIFT LOCK WHILE THE EQUIPMENT IS ON OR RUNNING !!

- 1) Insert key into the lock mechanism and turn clockwise $\frac{1}{4}$ turn so the lock button pops out or roll the dials to your personally set code and depress to unlock.. You may need to adjust the two halves if pressure is on the locking pin and it cannot be released.
- 2) Slide the two halves apart and remove them from the steering tire.
- 3) Remove the red shower-cap type cover from the steering wheel or drive control box.
- 4) Secure The Cushion Tire Lift Lock and red shower-cap type cover in a location that will allow for safe and proper equipment operation.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6

The Equipment Lock Company

Toll Free: 1.866.Lok it up (565.4887) • Ph: 540.722.1011 • Fax: 540.722.1110

www.equipmentlock.com

info@equipmentlock.com