

# Installation Instructions for the E-Series Skidsteer Lock

**Before installing locking device read instructions completely. Place all moving parts on the ground. Apply parking brake. Turn off engine. Remove key.**

## ***Important- if your Skid Loader has a lap bar that is hinged at the front of the cage (Bobcat®)***

1. Check for clearance between the lap bar and sides of the cage where locking device will be mounted.
2. Check for clearance between the sides of the cage and the bucket arm (include hydraulic lines).
3. If the lap bar is hinged at the front of the cage, the E-Series Skidsteer Lock may be installed outside of the cage. (See Figure 1)
4. If installing with this method place the locking plate on the outside of the cage and the mounting plate on the inside, continue standard directions.
5. Storage position outside of the cage. (Figure 2)
6. This is the recommended method for enclosed cabs.

## ***Standard Application***

1. The E-Series Skidsteer Lock should be installed on the left side (as if seated in the machine) of the protective cage.
2. Place the mounting plate on the outside of the cage and the locking plate on the inside of the cage at the desired location. The U-Bar may be used to hold these two plates in place and align the locking device with your drive control lever inside the U-Bar. (Figure 3)
3. Once in the desired locking position, install the 4 non-reversing screws loosely to hold the device in place.
4. Double check to be sure the U-Bar aligns with your drive control lever and the grid cage of your machine. Allowing it to pass completely through the protective cage.
5. Once you have checked and/or adjusted the locking device placement, tighten the non-reversing screws completely.
6. If your machine has wrist controls, a non-reversing hinge pin is recommended to enhance theft prevention.

## ***Locking your Skid Steer Loader with the E-Series Skidsteer Lock***

Now that you've completed the installation of your E-Series Skidsteer Lock, it's time to secure your machine.

**Place all moving parts on the ground. Apply parking brake. Turn off engine. Remove key.**

1. Hold the U-Bar with the locking pin holes facing the lock on the locking plate.
2. Slide the U-Bar into the locking plate with you drive control lever within it.
3. Push the U-Bar in as far as it will go and press the button on the locking device (with key removed).

*Your E-Series Skidsteer Lock is properly installed!*

## ***Unlocking and Storing***

1. Insert key and turn ¼ clockwise so locking pin will retract from U-Bar.
2. Turn key ¼ turn counterclockwise and remove key.
3. Slide U-Bar out of the locking plate.
4. Slide U-Bar (with locking pin hole side up) into locking plate storage position (Figure 4)
5. Align holes for storage position and insert locking pin provided, securing device safely out of operator's way.



Figure 1



Figure 2



Figure 3



Figure 4

**The Equipment Lock Company**  
**Toll Free: 1.866.565.4887**  
**www.equipmentlock.com**  
**info@equipmentlock.com**