

Stabilizer Lock Sizing Instructions

With your outrigger completely extended, measure "X" distance and select the size that will fit in that space

